


### **Installation Steps**


1. Place the F-shaped brace to align the bolt hold.

See figure 1

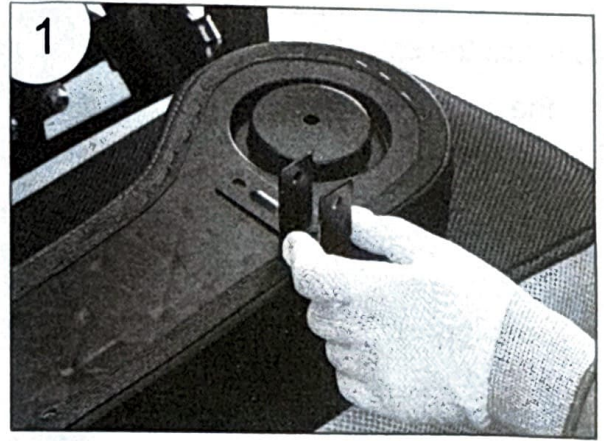


2. Take out 20mm bolts.

See figure 2

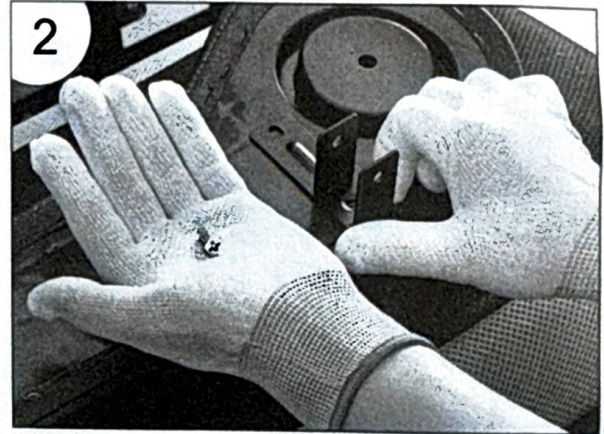


3. Use cross screwdriver to tighten the 20mm bolts.

See figure 3

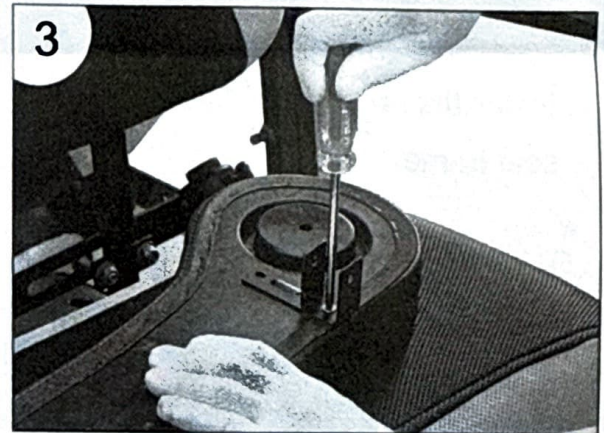


4. Use cross screwdriver to tighten the self-tapping screw.

See figure 4

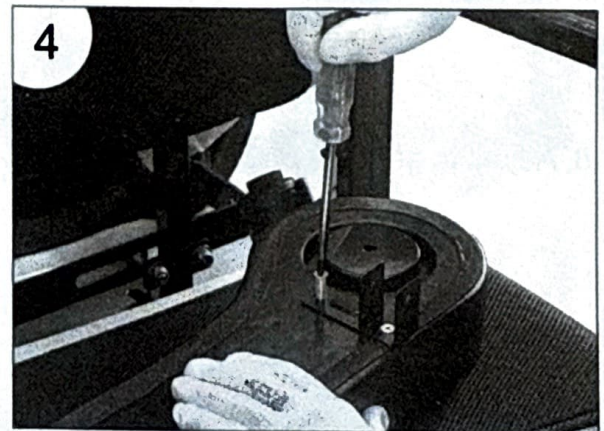


5. Stick the scratch-resistant tape to the grooves of F-shaped brace.

See figure 5

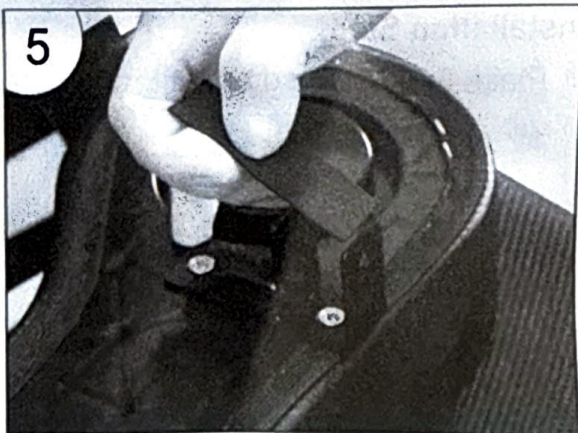


6. Taped grooves as figure shown.

See figure 6

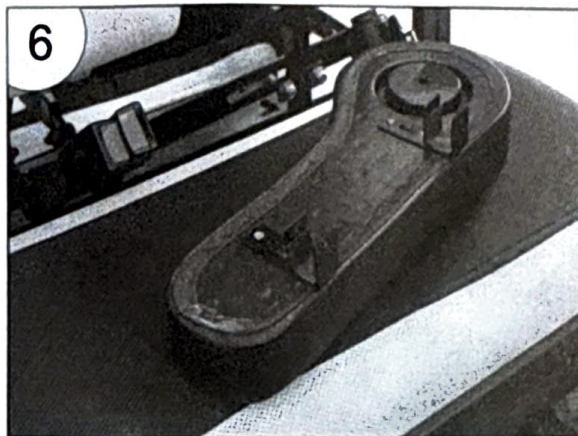

7. Install the armrests on the rear seat frame.

See figure 7

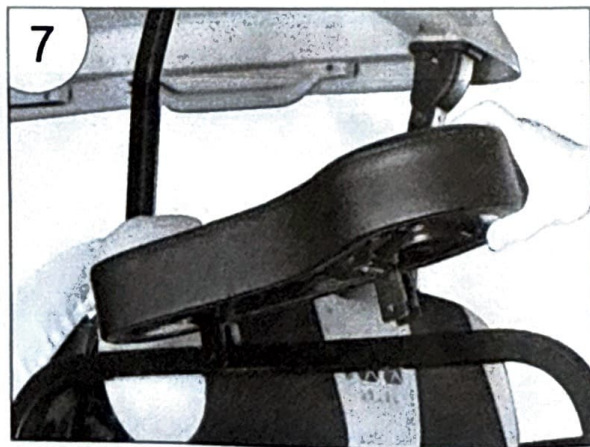


8. Adjust to suitable position.

See figure 8



9. Put on the 48mm bolts and washers.

See figure 9

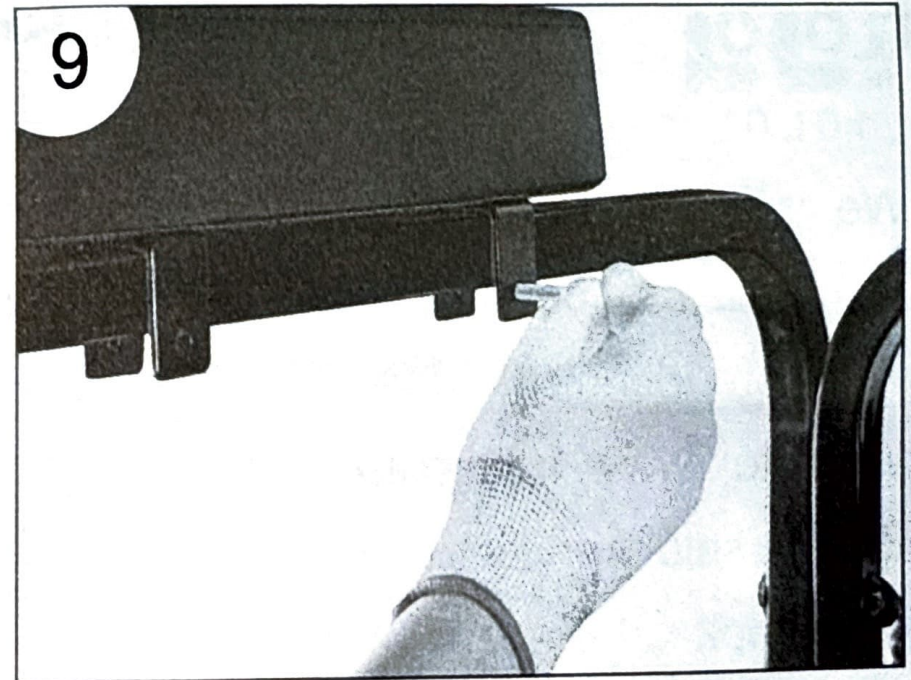

10. Use the wrench to tighten non-slip nuts to hold the armrests in place.

See figure 10

